 


iHandy®

IH-830J+L

Когда загорятся светодиодные индикаторы Power + Setup (Питание + Настройка), введите код пульта ДУ. Индикаторы погаснут, что значит, что настройка прошла успешно


PIONEER 101-121

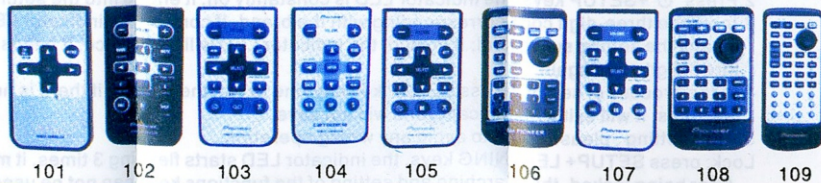

JVC 201-204



SONY 301-313

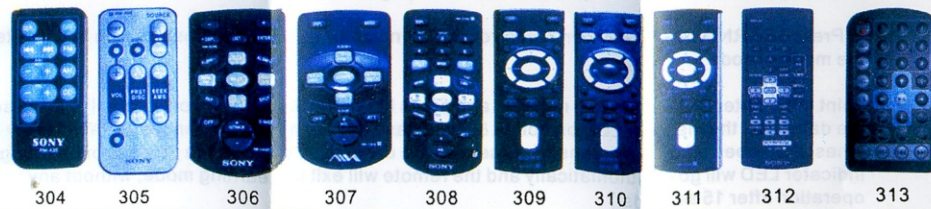

PANASONIC 401-406



TOYOTA 501





ALP 601-602



REHABILITATION WU 701-706



OWN-BRAND 901-977

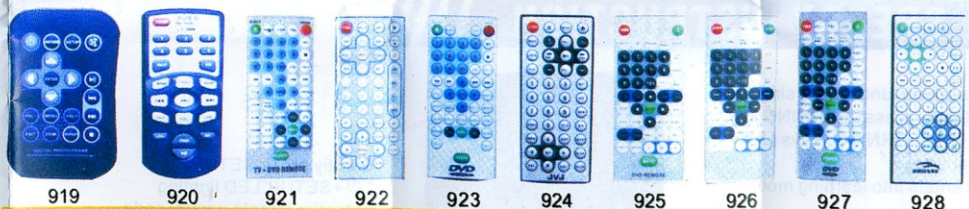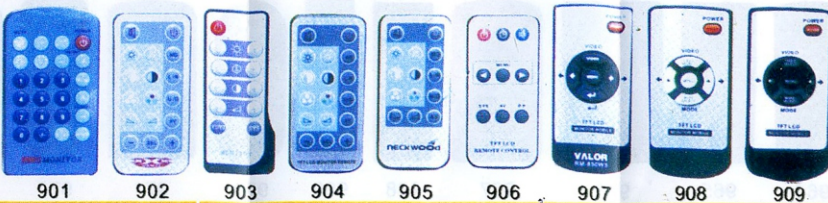




952 953 954 955 956 957 958 959 960 961 962 963



964 965 966 967 968 969 970 971 972 973 974

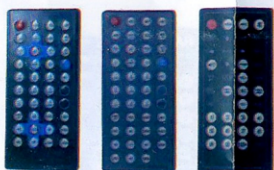


975 976 977

SPEEDY INSTRUCTION

Learning functions of single key
Shortly press LEARNING key,
"⏻ + LEARNING" keys LED
lighting,
It enters into learning mode

Lock function

Lock: press SETUP+ LEARNING
keys,
Unlock: Press LEARNING +SETUP
keys,

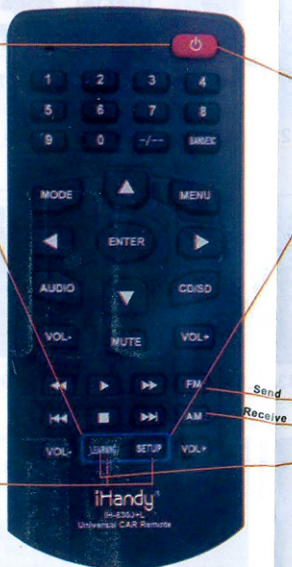

Shortly press "SETUP"
"⏻ +SETUP" LED lighting
Enter the remote control code,
lighting off and setting success

One-key learning function
Shortly press LEARNING key,
"LEARNING+FM" On "RECEIVE" controller
"LEARNING+AM" On "SEND" controller
SEND: indicates the remote that has
learned all the keys;
RECEIVE: indicates the remote that needs
to be learned with one-key
function.

Please Check The Detailed Instruction

INSTRUCTIONS FOR IH-830J+L OF CAR DVD REMOTE CONTROL

Introduction: this is the remote controller with the functions of code searching and learning, it can control most of the car DVDs on the market, and it's safe with child lock function.

CODE SETTING FUNCTION

1. Shortly press SETUP key, it switches to the page of the universal set.
 2. Press ⏻ +SETUP keys, the indicator LED is constantly on, it enters into the setting mode.
 3. Input the three-digit code corresponding with the brand. If correct, the indicator LED will be off, it means the setting successful; If invalid, the indicator LED will flash twice, it needs to input the three-digit code again.
 4. In the process of setting, press SETUP key anytime to exit the setting; if there is no key-press for 20 seconds, it will exit automatically, and will not save.
 5. After setting, please lock it to avoid any wrong operation.
- Lock: press SETUP+ LEARNING keys, the indicator LED starts flashing 3 times, it means it is locked. After being locked, the searching and setting of the functions keys can not be used. If reset, please unlock it.
- Unlock: press LEARNING + SETUP keys, the indicator LED starts flashing 3 times, it means it is unlocked.

LEARNING FUNCTIONS OF SINGLE KEY

This controller can learn the functions of other remote controls through learning function.

1. Shortly press LEARNING key, it switches to the page of learning code.
2. Press ⏻ + LEARNING keys, the indicator is constantly on, it enters into learning mode.
3. Press the key you want to learn, the indicator LED of the controller will flash slowly.
4. Point the emitter of the learning remote about 2-5cm at the emitter of this remote, press remote the learning key 1 to 2 seconds, the indicator LED of this remote starts flashing 3 times and then to be constantly on, which means this key completes learning. To learn the other keys, repeat the above step.
5. Press set key to save after learning and exit the learning mode, the indicator LED will be off.

ONE-KEY LEARNING FUNCTION

Notice: To instruct easily, we use A & B to indicate the different controllers.

A indicates the remote that has learned all the keys;
B indicates the remote that needs to be learned with One-Key function.

1. Shortly press LEARNING key, it switches to the page of learning code.

2. Press LEARNING + FM keys on B controller, the indicator LED will be constantly on and it enters to the mode of code receiving.

Point the emitter of a remote to b remote, and press LEARNING + AM keys on a, a will start to send the data to b, the indicator LED on both A & B will flash quickly and then changes to flash slowly 3 times, then goes off, which means A has sent all the code value to B. (In the process of Learning, the indicator LED will go off automatically and the remote will exit the learning mode, without any operation after 15 seconds.)

After setting, please lock it to avoid any wrong operation.

Lock: press SETUP+ LEARNING keys, the indicator LED starts flashing 3 times, it means it is locked. After being locked, the searching and setting of the functions keys can not be used.

If reset, please unlock it.

UNLOCK: Press LEARNING + SETUP keys, the indicator LED starts flashing 3 times, it means it is unlocked.

When Setting A Particular Model Remote Control Function After The Success, Only A Few Buttons At The Remote Control Available Is Normal