 


Air conditioner Remote Control

Q-1000E

Panel description

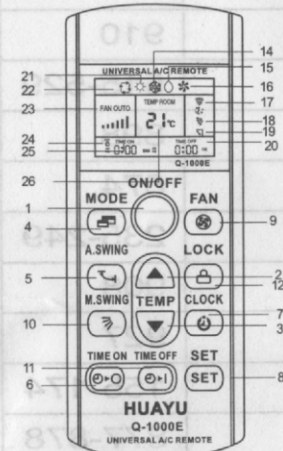 


- 1.ON/OFF
- 2.Temperature+
- 3.Temperature-
- 4.MODEL button
- 5.Auto wind directions
- 6.Time on
- 7.Clock button
- 8.Setup button
- 9.Wind strength button
- 10.Wind directions
- 11.TIME OFF
- 12.Lock button


- 14.COLD AIR
- 15.Dehumidify
- 16.Wind
- 17.Signal eject display
- 18.Manual wind display
- 19.Auto wind display
- 20.Time off display
- 21.Warm air
- 22.AUTO
- 23.FAN AUTO
- 24.LOCK
- 25.Time on display
- 26.Temperature display

How to install the batteries

1.Side open the battery compartment then insert two size AAA batteries.



 2.Close the battery compartment(Signal symbol"Time and Code type"will show on the operation screen)




Setting up steps

A.Manual setup steps


1. Manually plug-in the air conditioner,find the type of the air conditioner in the "Code Table",and find the first code, for example: "Haier"

品牌	代码
海尔	000-019


2. Hold"SET" button (for about three seconds)until the conditioner type code flickers in the window,press Temperature"▲"or"▼"buttons until the desired code flicker in the window. When the code is right, the air conditioner will start.

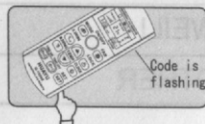

3. Press"SET" button and the selected conditioner type code will stop flickering.

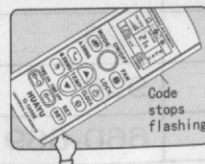


4. Test whether the remote control button has been effective set.If yes,setting completes.And if no, repeat steps 2-3.

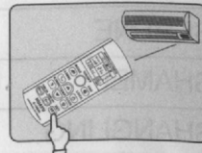


B.Auto-Searching steps:

1. Manually plug-in the air conditioner, aim the remotecontrol at the receiving window of the air conditioner


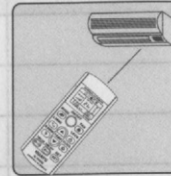


2. Hold "POWER" button(fou about six second)until the conditioner type code changes in the window ,indicating you have entered the high-speed conditioner type search status,press "any one" button to stop searching until the air conditioner automatically starts.

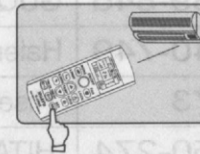

C. Clock setup steps

1. Press"clock"button for about 2 seconds.hour will flash then you can set by press "Temp▼" or "Temp▲".

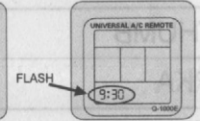
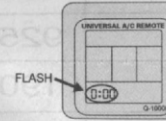


2. After setup the hour, press "clock" button again. minute will flash, press "Temp▲" or "Temp▼" to adjust.



3. After setup the minute, press "clock" button once, setup is finished.

D. Time on/off setup steps

1. When the Air-conditioner stopped, you can use the "Time on" Press "time on" button once, time will flash, press "Temp▲" or "Temp▼" to adjust.

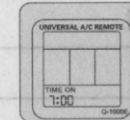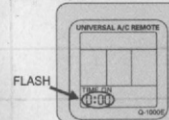


2. When the Air-conditioner playing, you can use the "Time off" Press "Time off" button once, time will flash, press "Temp▲" or "Temp▼" to adjust.

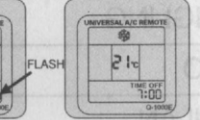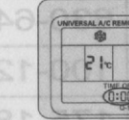

Note: When the time is setup to 00:00, which could close the Time on/off function.

E. Child Lock

Press "Lock" button for about 4 seconds, a lock icon will appear on the LCD, you can do nothing on the remote. To unlock,you need to press "Lock" button for about 4 seconds, the icon will disappear, you can do anything on the remote.

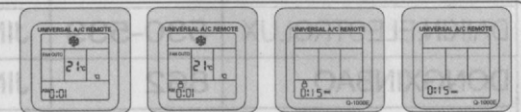

Special Instructions

- Ensure that your Air-conditioner receiver is working in order.If your Air-conditioner is not receiving it probably it will not be able to function by this remote control.
- Using the remote controller will not increase the functions of your Air-conditioner.For example;if your Air-conditioner does not have wind direction function,the wind direction button on this controller will not function with your Air-conditioner.
- Do not mix different type of batteries.
- If the electrolyte inside the battery compartment should leak,wipe the contaminated area of the battery compartment with a dry cloth and replace the old batteries with new ones.
- To prevent the electrolyte from leaking,remove the batteries when you plan not to use the controller for a long period of time.

CODE FORM FOR THE COMPONENTS

Brand	Code	Brand	Code	Brand	Code	Brand	Code
AIDELONG,CONROWA	839-845	GUQIAO	909	LANGGE	918	HANGLING,SHUANGLU	750-759
AITE,HICON	740-749	Haier	000-024	LG	400-409	HANGXING	910
AKIRA	873	Hisense	275-294	LIANGYU	863-864	HARP	515-529
AUCMA	250-274	HITACHI, XILENG	450-459	Littleswan	928	HARP	898
AUX	210-234	HONGYI	924	MCQUAY	913-917	SHENGFENG	874
BEIJINGJINGDIAN	875-876	HUABAO	125-134	MD	055-074	SHINCO	235-249
BIG-THUMB	923	HUAGAO	925	MEILING,NISO,TONGLI	790-799	SOGO	908
BOERKA	858-860	HUALING	190-209	MINGXING,BOYIN	922	SOYEA	927
BOSHI	871-872	HUAMEI	865-866	mitsubishi	380-399	TCL	155-174
CHANGFU	879	Huawei	902	mitsubishi	540-599	TECO	877-878
CHANGHONG	075-099	HUIFENG, CHUANGHUA, GUANGDA	835-838	national	900	TIANJINKONGTIAO	912
CHANGLING	630-649	INYCIN	610-629	NIKKO	897	TIANYUAN	850-854
CHIGO	100-124	JDC	921	PANASONIC/NATIONAL	460-479	TOBO	310-329
CHUNLAN	175-189	JIALE	867-868	PANDA	846-849	TOSHIBA	435-449
CORONA	500-514	JIANGNAN	869-870	QIXING	911	TRANE, MCQUAY	820-834
DAIKIN,ELECTROLUX	530-539	JINBEIJING,FEIGE	810-819	RAYBO	710-729	UTTLEDUCK	888-890
DONGXINBAO	862	JINDA,HUAKE	800-809	RAYBO	899	WANBAO	855-857
FEILU	295-309	JOHNSO	861	RORK	920	WEITELI	891
FRESTECH	892-896	KANGLI,UNI-AIR	730-739	ROWA,JINSONG	760-769	WHIRLPOOL	650-659
FUNAI	919	KELONG	135-154	SAIJO, DENKI	770-779	XINGHE,DONGXIA	882-884
Galanz	885-887	KT02_D001	903	SAMSUNG	410-434	YAIR	600-609
GARRIER,FUJITSU	480-499	KT02_D002	904	SANYO,NEC	330-379	YORK,MEILING	780-789
GLEE	901	KTY001	905	SERENE	929	YUTU	690-709
Goldstar	880-881	KTY002	906	SHAMEI	926	WEILI	670-689
GREE	025-054	KTY004	907	SHANGLING	660-669	OTHER	930-999