

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.



EN2B27



ER-31607R



ER-22655HS



ER-22642R



ER-22641R



EN-22652A



EN2h27B



EN2h27hs



EN2S27D



EN-31906D



EN-31603B



EN-21662B



EN-32963HS



EN-31603A



ER-32961HS



EN-21662



EN-31907



ER-22654



EN-22601A

Please use directly, if can not use, please try to make setup as follow:

A.Inputting code:

Press "POWER" key and "corresponding digital" key, then release.

POWER+0:001,002,003,004

POWER+1:005, POWER+2:006

POWER+3:007, POWER+4:008

POWER+5:009, POWER+6:010

B.Automatically searching :

Press and hold the "POWER" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "POWER" button at once, set finished.

C.Restore factory Settings

Press "POWER" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings