

# HUAYU®

RM-F989



# HUAYU®

RM-F989

## RM-F989 Universal Fan Remote Control

You can use it directly or manually set by hold down the SET button for about 5 seconds untill the remote singal being receive by the fan.

Reset remote please press SET+ON/OFF button at the same time about 5 seconds.

