

2 Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicador se enciende.
Ver si el símbolo de volumen aparece en la pantalla, si es así,suelte de inmediato el botón SET para detener la búsqueda automática.



D. Modo de búsqueda de punto a punto

 
- punto**

 1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo.



La table de symbole correspondant à la marque

2. pulsada botón de símbolo de marca correspondiente,durante unos 3 segundos no suelte el botón hasta que la luz indicadora parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien , si no, proceder al reemplazamiento.



E.Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

* * * * *

Warm Tip

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "Inputting code". If it can't

Please input the other codes according to sequence.

- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
 - When you use the method "Manually searching for the code", because the codes are too much, you need to wait automatically.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types).

• Rameau-Turon: 20

* battery type: two pieces of AA batteries
After-sales Service
If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that

have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shipping bills or receipts when buying the product.
The Company reserves the final interpretation of this specification. The design

 
and terminal conformations could be unchanged without move-

The image displays a horizontal row of twelve remote control units, each labeled with a three-digit number from 001 to 012 above it. The remotes vary significantly in design, color, and button configuration. Some are dark-colored with light-colored buttons, while others are light-colored with dark buttons. The complexity of the button panels also varies, with some having standard numeric pads and basic function keys, and others featuring numerous specialized buttons for various media and device controls.

The image displays a horizontal row of nine remote control units, each labeled with a three-digit number above it. From left to right, the labels are: 022, 023, 024, 025, 026, 027, 028, 029, and 030. The remotes vary significantly in design, color, and button arrangement. Some are dark-colored with light-colored buttons, while others are light-colored with dark buttons. The complexity of the button panels also varies, with some having standard numeric pads and function keys, and others featuring more specialized or extensive control panels.

RM-L1130+8

031	032	033	034	035	036	037	038	039	040	041	042	043	046	047
HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA SD-212	SUPRA HDF12H126 GPDI1	SUPRA RC1b	SUPRA RCSb	SUPRA RCSdb	SUPRA RC13b	SUPRA RC-118-0B	SUPRA STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSEN ER-31607R	HTC056 RC1994907-01	HTC058 RC198
063	066	067	068	069	070	071	073	074	079	080	081	082	083	084
LCD-2277RC	HOB302 HYUNDAI 1587 RCF1B	HOB376 LCD2302GCO VA10285J	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAIPC221	HOB018 ELENBERG Y27401	HOB354 ELENBERG	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 HOB273	HOB373 EN-216628	HOB223 RC-L-05
100	101	102	103	104	105	106	107	108	109	110	112	113	114	115
HOB339 GI52138	HOB381 HDF12E M48GPDS	HOB346 HDF106 Z05GPDS	SONIQ QT-112	SUNSTECH TL1970HD	HOB195 H-LCDDVD2200	HOB196 HOB196	HOB314 SingerLCDK26 -10g	HOB365 RM-611	HOB308 IR1492 SENCOR	HOB310 HOB310	HOB342 STV -LC1985WL	HOB382 GI HOB128M41 GPDI1	HOB370-N5021RD N5020-N5021RD N5020-N5021RD	NFO399RD NFO399RD

048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	
															
HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX -1253	HOB281 MYSTERY S195	HOB282 MYSTERY 8151	HOB301 MYSTERY KT6957 6857	HOB106 MTV-1914LW	MESTERY LCD LED TV NEW	H5R499 HIVION	HOB402 iSTAR	HOB403 iSTAR	HOB405 iSTAR	ER-31607	HOB438 ER-31607R -1098#	
085	086	087	088	089	090	091	092	093	094	095	096	097	098	099	
															
HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERICOM06	HOB150 BERICOM07	HOB206 EL-41UA299	HOB329 T15E01MT	HOB330 H-LED32V6	HOB341 STV-LC1914W	HOB418 ZD-RC30	DMTECH	HOB262 HOB262	HOB344 HOF-5A1-2	HOB249 PARS	HOB292 HS02-2	HOB013 HOF-5A1-4	
6	117	120	121	122	123	124	125	126	127	130	131	132	133	134	135
															
RC221	RC10SB	dayton	HOB358	RC	RC	TCLCO	KALAY	2000	HOB162	HOB187	LCD-2600	HOB229	HOB242	HOB253	