

Universal DVD Remote

■ HR-D605

Universal DVD Remote

 
Thank you to use this remote control, after will read please retain this instruction booklet, in order to will establish in the future time will use!

About this Remote controller

HR-D605 is our latest universal DVD remote. It can control hundred different type of DVD in the world. Its special automatic searching way makes you easy and convenient to use it.

HR-D605 is your best choice for your original DVD remote lost, damaged.

Panel Description

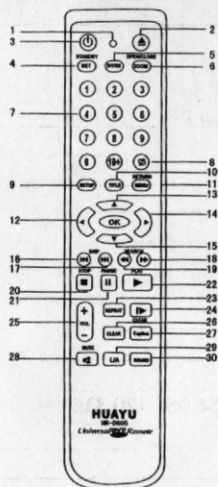

- | | |
|---------------|-------------|
| 1. INDICATOR | 16. SKIP |
| 2. open/close | 17. SKIP |
| 3. POWER | 18. SEARCH |
| 4. SET | 19. SEARCH |
| 5. SYSTEM | 20. STOP |
| 6. ZOOM | 21. PAUSE |
| 7. CHANNEL | 22. PLAY |
| SELECT | 23. REPRAT |
| 8. RETURN | 24. CLEAR |
| 9. SET UP | 25. VOL+/- |
| 10. TITLE | 26. CLEAR |
| 11. MENU | 27. CAPTION |
| 12. ◀ LEFT | 28. MUTE |
| 13. ▲ UP | 29. L/A |
| 14. ▶ DOWN | 30. SOUND |
| 15. ▼ RIGHT | |

Installing the batteries

Open the battery cover and pay attention to the +/- marks, insert two new AAA(size5) batteries(not supplied)



Note on batteries

● Do not mix old batteries with new ones or mix different types of batteries together.

● If the electrolytes leaks inside the battery compartment, clean it with a piece of cloth and put in a new battery.

Setting up the DVD

 
There are three set up method (A,B,C) for this remote please choose one of them

A.Entering the code


1. Turn on your DVD, and looking for the correct code for your device from the "component code numbers".



2. Press the "set" key continuously, until the light is on then release.



 3. Enter the 3-digit code you have selected for you device, if the code you entered wasn't the figure or the hundred digit big than 3, the light will flash 3 times then you must reset. If you enter the 3 correct code the light will flash every time then the light will out.



4. Press "set" key you will back out or don't press any key just wait for 25 seconds you also can back out.

 


※ If can't work then repeat step1..


⚠ Maybe will have many code can suitable your DVD so we suggest you to test all of them and find the more exactly code for your DVD.

B. Manual function of search

1. Turn on your DVD, then keep on press the "set" key (about 5 seconds) until the light is on.



 
2. Press "play" key continuously then will enter the search code



3. During search code, press other key will send out the data.



 
4. Press "set" key you will back out or don't press any key just wait for 25 seconds you also can back out.



※ If can't work then repeat step2..

C. Automatic function of search

 1. Turn on your DVD, then keep on press the "set" key (about 5 seconds) until the light is on.



2. Press the "power" key,



3. Press any key to stop, then press "set" key to preservation and back out.



4. Before press "power" key, don't press any key in 25 seconds can back out.

※ If can't work then repeat step1..

Trouble shooting

If you have problems in setting up or using the controller

- ◆ Check that you are aiming the controller directly at the SAT and that there are no obstructions between the controller and the SAT.
- ◆ Make sure the batteries you are using are not worn out, and that they are inserted correctly.
- ◆ Check that your SAT has receive capability. For example: if your SAT did not come with a remote controller it probably is not capable of being controlled by a remote controller.
- ◆ If you do not operate properly, the controller will close down. At this time you have to remove the batteries and wait for 20 minutes. Insert the batteries again and the controller recover again.

Specifications

Operable distance: More than 8 meters
Power requirement: Two size AA batteries.
Dimensions: 45x135x22mm(w/h/d)
Mass: approx. 100g(not including batteries)

Service

If you have troubles in using the controller and the "Trouble shooting" can not help you, please contact us. We will do our best to service you. Please don't open the controller by yourself. We will not take the responsibility if you open it by yourself.



HUAYU®**Universal DVD Remote****CODE FORM FOR THE COMPONENTS**

| Brand | CODE |
|--------------|---|
| BUBUGAO | 018.021.027.028.033.048.078.091.094.099. 145.287.312 |
| Panasonic | 014.204.273.274 |
| PHILIPS | 012.143.152.153.154.227.264 |
| JINGZHENG | 003.035.071.079.080.081.082.090.093.129. 130.291.320.322 |
| QISHENG | 005.037.092.098.101.282.305.306.307.308. 323.331 |
| Malata | 002.009.023.024.073.146.147.151.297.313 |
| SKYWORTH | 022.025.032.034.058.096.097.100.119.121. 293.301.314.321 |
| XIANKE | 011.020.038.059.060.076.140.142.288 |
| XIANFENG | 044.229 |
| XINKE | 001.010.108 |
| XINTIANSHU | 131 |
| XIAXIN | 111.112.114.135 |
| AIDUO | 128 |
| AIWA | 150.180 |
| AIYUN | 299 |
| ANQIAO | 043.223.224 |
| AIERWANGZI | 066.067 |
| AODIER | 298 |
| AODELONG | 316 |
| BULANTE | 064.065 |
| CAIXING | 088.095 |
| CHANGHONG | 136.137.138 |
| DAEWOO | 086.087.187.188.189.190.191.192.193.194. 267.279.325 |
| DESAI | 026.074.117.300 |
| TOSHIBA | 041.069.242.243 |
| GEWANG | 328 |
| FENGDA | 285 |
| HUABAO | 029.061.062.063.302 |
| DINGTIAN | 127 |
| DIHE | 070.077.107.317 |
| HAIER | 116.146 |
| HISENSE | 134.143.311 |
| HUAJIA | 125 |
| JIANWU | 075.204.205.206 |
| JIEKE | 089.292.294.295.296.310.322 |
| JINGEWANGPAI | 031.283 |
| JINWEIKE | 289.290 |

| Brand | CODE |
|-----------------|-------------------------------------|
| JINWEI | 011 |
| KONKA | 139.207 |
| JUGAO | 318 |
| KETAI | 030 |
| SHARP | 235.236.237 |
| YOUBISHENG | 124 |
| AKAI | 006 |
| YUXING | 115.156 |
| LINGSHUMA | 036 |
| LONGZHIPAI | 284 |
| MINGTIAN | 303.304 |
| MASHILAN | 211.212.213.227 |
| PAIGAO | 327 |
| QINGHUATONGFANG | 056.057.309 |
| HITACHI | 202 |
| SHIDA | 118 |
| SAMSUNG | 004.006.017.049.104.149.202.232.266 |
| MITSUBISHI | 215 |
| SANYO | 233.234 |
| SHANSHUI | 013.046 |
| NEC | 108 |
| SHERWOOD | 319 |
| SUOHUA | 155 |
| SONY | 040.042.177.178.260 |
| THOMSON | 083.230 |
| WANYAN | 126.146 |
| WANBAO | 296 |
| WEIFA | 050 |
| XIANPAI | 070 |
| PANDA | 038.051.052.053.102.105 |
| XIANDAI | 085 |
| AIKO | 179 |
| AKISHI | 181 |
| AKUSTIC | 179.258 |
| APEX | 182 |
| AUDIOVOX | 183 |
| AVLIGHT | 143 |
| GOBY | 185 |
| CLASSIC | 184.270.271 |
| CYBERHOME | 186 |
| ELEKTRA | 192 |
| DENON | 195 |
| DIGIXMEDIA | 196 |
| DVD | 016.019.261 |
| ELEKTRA | 197 |

| Brand | CODE |
|---------------|---|
| FISHER | 233.262 |
| FUSSION | 198 |
| GO VIDEO | 199.200 |
| GPX | 201 |
| GE | 231 |
| Hao ji | 068 |
| HARMAN KARDON | 276 |
| HITER | 089 |
| JVC | 045.203.151.275 |
| LASONIC | 208.209 |
| GL | 008 |
| ZONDA | 249.250 |
| LINITRON | 241 |
| LAFAYETTE | 225 |
| MAJESTIC | 210.265 |
| MEGA TANSS | 214 |
| mitsui | 216.217.269 |
| MITZU | 179.251 |
| MTB | 218.219 |
| NAKAMICHI | 220 |
| NAPA | 221.277 |
| NORCENT | 222 |
| OKON | 072 |
| PHILCO | 225.226.263.268.272 |
| PROSONIC | 252 |
| POWER SOUND | 179 |
| ROYAL | 225.272 |
| RCA | 230.231 |
| SMC | 238 |
| SONICO | 259 |
| sonashi | 304 |
| SOUND TRACK | 257 |
| SUPERSONIC | 225.239.272 |
| TCL | 000.015.039.054.055.120.315 |
| TEAC | 240 |
| TOP TEC | 241 |
| UNIREX | 244 |
| UNITRON | 241 |
| VCD2 | 245 |
| Victor | 047.084.103 |
| VIDEO CD | 253.254.255.256 |
| VOX | 246 |
| WEGA TAMSS | 278 |
| YAMAHA | 227.247 |
| YAMAKAWA | 248 |
| ZAIPAIJI | 007.016.019.106.109.110.113.122.123.132. 133.157.141.144.148.158.159.160.161.162. 163.164.165.166.167.168.169.170.171.172. 173.174.175.176.245.261.280.281.324.329. 330.332 |