



Подходит для магнитол PANASONIC:

CQ-C1001NE, CQ-C1001NW, CQ-C1011NE, CQ-C1011NW, CQ-C1021NE, CQ-C1021NW, CQ-C1100VN, CQ-C1103NE, CQ-C1103NW, CQ-C110VN, CQ-C1110AN, CQ-C1110GN, CQ-C1113NE, CQ-C1113NW, CQ-C1115N, CQ-C1120AN, CQ-C1120GN, CQ-C1123NE, CQ-C1123NW, CQ-C1300AN, CQ-C1300GN, CQ-C1301NE, CQ-C1301NW, CQ-C1303NE, CQ-C1303NW, CQ-C1311NE, CQ-C1311NW, CQ-C1312NW, CQ-C1313NE, CQ-C1313NW, CQ-C1315N, CQ-C1321NE, CQ-C1321NW, CQ-C1323NE, CQ-C1323NW, CQ-C1325N, CQ-C1400N, CQ-C1405N, CQ-C1415N, CQ-C1425N, CQ-C1465N, CQ-C1475N, CQ-C1505N, CQ-C3100AN, CQ-C3100GN, CQ-C3100VN, CQ-C3300N, CQ-C3301N, CQ-C3303N, CQ-C3305N, CQ-C3355N, CQ-C3503N, CQ-C5100N, CQ-C5300N, CQ-C5301N, CQ-C5303N, CQ-C5355N, CQ-C5400N, CQ-C7300N, CQ-C7301N, CQ-C7302N, CQ-C7303N, CQ-C7305N, CQ-C7703N, CQ-C8100N, CQ-C8300N, CQ-C8301N, CQ-C8351N, CQ-C8352N, CQ-C8403N, CQ-C8405N, CQ-C8803N, CQ-C9700N, CQ-C9701N, CQ-C9800N, CQ-C9901N, CQ-CC1321NE, CQ-CC1505N, CQ-DFX203N, CQ-DFX213N, CQ-DFX223, CQ-DFX223N, CQ-DFX683, CQ-DFX683N, CQ-DFX777, CQ-DFX783, CQ-DFX783N, CQ-DFX883N, CQ-DFX903N, CQ-DFX983N, CQ-DP151, CQ-HR1003N, CQ-HX1003N, CQ-HX1083N, CQ-HX2083N, CQ-MX2083N, CQ-RD105R, CQ-RD133N, CQ-RD143N, CQ-RD153N, CQ-RD243N, CQ-RDP003N, CQ-RDP103, CQ-RDP103N, CQ-RDP112N, CQ-RDP113, CQ-RDP113N, CQ-RDP123, CQ-RDP123N, CQ-RDP133, CQ-RDP133N, CQ-RDP143, CQ-RDP143N, CQ-RDP153N, CQ-RDP162N, CQ-RDP383N, CQ-RX101N, CQ-RX102N, CQ-RX103N, CQ-RX200N, CQ-RX300N, CQ-RX400N, CQ-VCD163WJ, CQ-VCD666ED.